



Digital Remote Indicator  
Scale, 500 lb capacity  
570-0596



## Table of Contents

<b>Safety</b> .....	<b>3</b>
<b>Before you start...</b> .....	<b>3</b>
Unpacking.....	3
Power supply .....	3
Battery Indicator.....	4
Operation.....	4
<b><i>Display Module Types</i></b> .....	<b>4</b>
<b><i>Buttons</i></b> .....	<b>4</b>
<b><i>Scale Features</i></b> .....	<b>5</b>
<b><i>Scale Operation</i></b> .....	<b>5</b>
Installation & Assembly .....	6
Cleaning.....	7
<b>Troubleshooting</b> .....	<b>7</b>
<b>Maintenance</b> .....	<b>8</b>
<b><i>Changing the batteries</i></b> .....	<b>8</b>
<b>Technical data</b> .....	<b>8</b>
<b>Disposal</b> .....	<b>9</b>
<b><i>Disposing of the device</i></b> .....	<b>9</b>
<b>Technical Support</b> .....	<b>9</b>
<b>Warranty</b> .....	<b>9</b>

## Safety

---

Before using the new scale, please take time to read the following safety instructions.

- Follow the instructions in the instructions for use.
- Do not drop the scale or subject it to violent shocks.
- Use only the type of battery stated.
- Have scale serviced and re-calibrated on a regular basis.
- Have repairs carried out only by authorized persons

## Before you start...

---

### Unpacking

Carefully remove the scale from the shipping carton. If you notice any shipping damage to the product, please contact the shipper immediately. Please retain all shipping material in case the product needs to be returned or the scale needs to be shipped to another location.

Remove the packaging and place the scale on a firm, level surface. The scope of supply includes:

- Weighing platform
- Remote Display
- Wall Mounting Bracket
- 4-AA batteries

### Power supply


The scale is generally powered by the supplied AC-Transformer. 4-AA batteries are used as a power back-up and will supply enough power to power the scale for 7 days.

- Carefully turn over the scale so that the base of the scale is accessible.
- Push the battery compartment closure towards “Battery” and open the cover.
- Install the supplied 4-AA batteries.
- Close the cover and then turn the scale back up the right way.

The connection socket for the mains unit is in the rear of the base of the scale.

## Battery Indicator

The battery indicator displays the remaining battery life available.

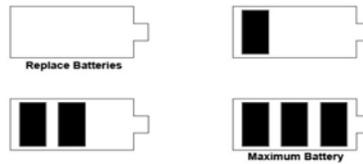

## Operation

---

### Display Module Types



### Buttons

**Zero:** The scale can be reset to zero weight by pressing the zero button.

**Units:** Press the Units button to toggle between Lb/Kg mode.

**BMI:** The scale will go into BMI mode.

**Reweigh:** This will allow a weight to be retaken without having to remove the user from the scale platform.

## Scale Features

**Instant On:** The scale will turn on automatically when the user steps on the scale or any button is pressed. The scale will automatically turn off after 15 seconds.

**BMI:** Accesses BMI mode. See instructions below for BMI use.

**Low Batt:** Indicates when the batteries require replacement.

## Scale Operation

### User weighing

1. Step on the scale and remain still.
2. When a stable weight is reached, the display will beep and hold the weight reading.
3. The scale will hold the weight until it shuts off automatically.

### BMI (Body Mass Index) Reading

1. Step on the scale and remain still.
2. When a stable weight is reached, the display will beep and hold the weight reading.
3. Press the BMI button.
4. To change the value of the flashing digit, press the up/down arrow buttons. Press the BMI button to accept the correct height.
5. When BMI is pressed to accept the rightmost digit, the BMI value will be displayed.

### Zero Button

1. Press the zero button.
2. The display will display a zero button after the scale becomes stable.

## Installation & Assembly

---

Connect the cable connector to the rear of the indicator. The connector is keyed to prevent misalignment.

The indicator can be wall mounted by using the bracket that is attached to the indicator. Once the indicator is mounted to the wall, you can adjust the viewing angle by loosening the knobs on the side and adjusting to the proper angle. Only hand tighten the knobs, no tools are required to tighten the knobs.

The scale platform should rest on a flat stable surface for proper weighing results. Please ensure that all four scale feet are touching the floor.

The indicator can also be used on a flat table surface. Four rubber feet are included with the indicator. Tilt the indicator so that the four rubber feet are touching the flat table surface.

This product comes with a carpet foot design. (no attachments necessary) When using the scale on a carpet surface, please ensure that the bottom of the scale platform does not touch the carpet.

## Cleaning

---

Clean the rubber surface and the housing as required using a domestic cleaning agent or commercially-available disinfectant. Follow the manufacturer's instructions.

Under no circumstances use abrasive or acid cleaners, white spirit, benzene or the like for cleaning. Such substances can damage the high-quality surfaces.

## Troubleshooting

### **... no weight display comes on?**

- Check the batteries.
- Is the plug contact on the scale properly connected?

### **... 0.0 does not appear before the weighing operation?**

- Press the Zero button to turn on the scale
- there must not be any load on the scale

### **... ---- appears instead of 0.0 before weighing?**

- Press the Zero button.
- there must not be any load on the scale.

### **... one segment is illuminated constantly or not at all?**

- The relevant segment has a fault. Inform Servicing.

### **...the display shows?**

- Battery voltage is running low. Change the batteries in the next few days.

### **... bAtt appears in the display?**

- Batteries are empty. Put in new batteries.

### **... ou LD appears in the display?**

- Maximum load has been exceeded.

## **Maintenance**

To ensure that the scale accuracy is maintained, the product must be carefully set up and regularly maintained. Depending on the frequency of use, it is recommended to service the scale every 3 to 5 years by a qualified service lab. For any additional questions please contact Henry Schein Customer Service at 1-888-392-8492 for further information.

### **Changing the batteries**

When bAtt appears in the display, you should change the batteries. You need 4-AA batteries.

- Carefully turn over the scale so that the base of the scale is accessible.
- Push the battery compartment closure towards “Battery” and open the cover.
- Take out the holder and batteries.
- Remove the used batteries and insert new batteries in the holder.

## **Technical data**

---

<b>Dimensions</b>	
<b>Width:</b>	15"
<b>Height:</b>	2.5"
<b>Depth:</b>	15"
<b>Platform Size</b>	15" x 14.45" x 2.3"
<b>Weight</b>	10 lbs
<b>Power supply</b>	AC Transformer
<b>Batteries</b>	4 AA-size
<b>LCD</b>	1.1" LCD text character w/orange back light
<b>Capacity</b>	500lb x 0.1 lb (225 kg x 0.05 kg)
<b>Accuracy</b>	+/- 0.1 lb, 0.05 kg
<b>Functions</b>	Switch between units, Body Mass Index

# Disposal

---

## Disposing of the device

### Batteries

Do not dispose of the device in domestic waste. The device must be disposed of properly as electronic waste. Follow the national regulations which apply in your case.

Do not throw used batteries away in domestic waste. Dispose of batteries at collection points in the vicinity. When buying new batteries, select those low in harmful substances and containing no mercury (Hg), cadmium (Cd) or lead (Pb).

## Technical Support

For further information, contact our service department at:

**1-888-392-8492**

*Distributed by (in US only):*  
**HENRY SCHEIN INC.**  
135 DURYEA ROAD  
MELVILLE, NY 11747 USA

Made in China



Consult instructions for use



Contains No Natural Latex

## Warranty

A two-year warranty from date of delivery applies to defects attributable to poor materials or workmanship. All moveable parts - batteries, rechargeable batteries etc. - are excluded. Defects which come under warranty will be made good for the customer at no charge on production of the receipt. No further claims can be entertained. The costs of transport in both directions will be borne by the customer should the equipment be located anywhere other than the customer's premises. In the event of transport damage, claims under warranty can be honored only if the complete original packaging was used for any transport and the scale secured and attached in that packaging just as it was when originally packed. All the packaging should therefore be retained.

A claim under warranty will not be honored if the product is opened by persons not authorized by **Henry Schein, Inc.**

Henry Schein scales' liability under this warranty is limited to the repair or replacement of the defective product and in no event be liable for consequential or indirect damages to equipment or personnel.

Rev. Date 2017/06