

INSTALLATION and SET-UP

INSTALLATION:

Open dispenser

To open the dispenser, use the provided key to press down at the top of the front cover where the key lock is located. Hold the dispenser cover from the top toward you. The cover is hinged at the bottom of the dispenser.




Installation using adhesive tape

1. Make sure the mounting surface is flat, clean and dry. (Adhesive mounting is only recommended for mirrors or similar surfaces.)

Dispenser must be mounted at least 8 inches above any surface.

2. Remove protective backing from adhesive tape and press dispenser firmly against the mounting surface for about 15 seconds. Open front cover and press directly for an additional 15 seconds. Allow 1 hours to set before using the dispenser.

Screw mounting holes (2)

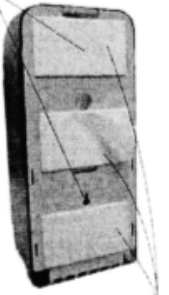

Adhesive tape (3)

Installation using screws and anchors:

1. Hold the dispenser against the wall in the desired location, open cover and mark screw hole locations on the wall.
2. Install the provided anchors into drywall and secure the dispenser with the provided screws.

SET-UP:

Installing batteries

Open the dispenser, locate the battery compartment on the right side of the dispenser and slide the compartment cover forward, away from the wall. Place three (3) C-cell Alkaline batteries in the proper orientation and slide the cover back into place.

Installing the soap cartridge:

1. Place the soap cartridge on top of the control box with the pump facing front and downwards.
2. Then pull the pump downward and slide into the U-shape groove of the control box. Make sure it is in between the rubber and tip.
3. Close the dispenser cover. The LED indicator will blink GREEN/RED three times. The dispenser is now ready to be use.
4. Place hand underneath the dispenser, within 8cm of the sensor. The LED will blink GREEN and dispense soap onto your hand.

To RESET: Open and Closed Cover

Sensitivity adjustment:

If the sensor is too sensitive, remove the black sticker that is covering the Sensor Adjustment screw. Turn the screw counterclockwise slightly. *i.e.: like the dial on a clock, turn in 15 minutes interval to the desire setting.*

Safety switch
(when cover is opened, this
switch is released and unit is off.)


Sensitivity Adjustment

LED Indicator

Pump

Battery compartment

Key Locks

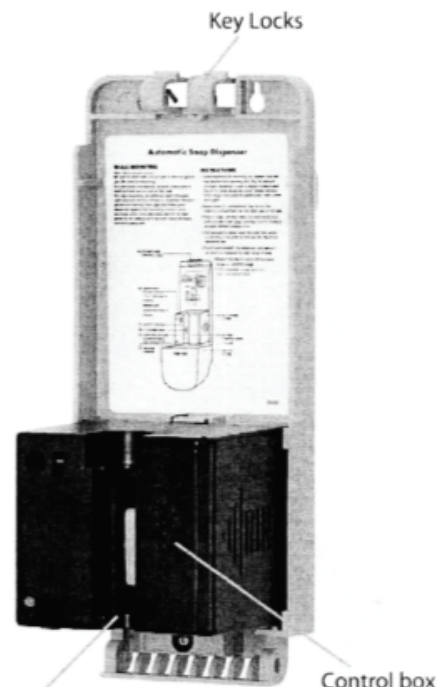

U-shape groove

Control box